Watch This Install



SUPPORT

 
hello@getoffroam.com

415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam, shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- . Designed to work with OEM air vents. Not compatibile with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit. Mount electronics away from air flow to prevent heat damage.





Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

 Do not fully remove the screws - keep about one thread engaged.



>3mm (1/8") GAP







Hook the short plate (01) into the seam between the multi-function display and air vent bezel. Then hook the long plate (02) over the rear air vent seam.





Alternate tightening screws until clamp has a snug fit using the L-key provided.

To ensure the best fit possible, hold clamp with hand while tightening.



Clamp is designed to fit on the inner upper corner on either the driver or passenger side air vents next to the multi-function display.

POSITIONING

