


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

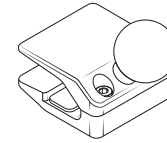


Mounting Base Installation Instructions

Ford Explorer 2020-2024
Ford Explorer Police Interceptor 2020-2024

COMPONENTS

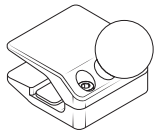

Mounting Base




L-key

01


Using the L-key provided, slightly loosen the screws to ensure the lower plate moves.

Do not fully remove the screws - keep about one thread engaged.

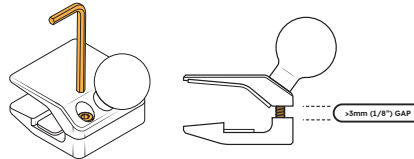

02


Position the lower mounting base lip (01) under the upper dash bezel. Then slide the upper mounting base (02) over the upper dash bezel.

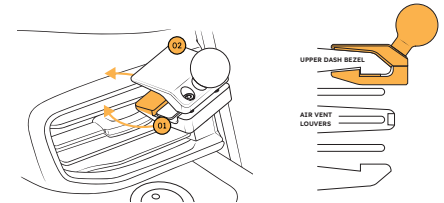

03

Using the L-key, alternate tightening screws until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

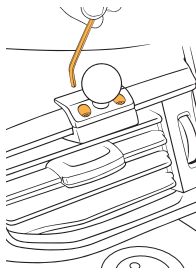

POSITIONING

FORD EXPLORER

Fits the driver and passenger side air vent as shown.



FORD EXPLORER POLICE INTERCEPTOR

Fits the passenger side air vent as shown.



WATCH THIS INSTALL

