#### WARNINGS


 Do not mount accessories in front of or near the path of airbag deployment. Check vehicle compatibility before install to avoid damage to the vehicle mount point. Designed to work with OEM dashboard only, not compatible with aftermarket modifications. Do not use with 3rd party extention arms. Adhere to our phone weight limits. Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

#### Watch This Install




COMPONENTS



## Using the L-key provided, slightly loosen the screws to ensure the outer plate moves.

Do not fully remove the screws - keep about one thread engaged.

(01)



(02)

Align mounting base clearance gaps with second or lower air vent louvers.

Slide mounting base inner plate lip (01) fully into the seam between the dash and screen bezel. Hook the tabs of outer plate (02) behind air vent bezel trim.



### (03)

Hold the mounting base in position firmly keeping tabs hooked on the bezel.


Alternate tightening both screws until snug

Note: Mounting base limits air vent angle but does not block air flow.






Fits in any position along the straight portion of the air vent bezel as shown.

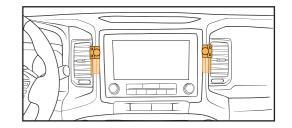





# Mounting Base Installation Instructions

Nissan Frontier 2022-2024