

# Watch This Install




SUPPORT  
hello@getoffroad.com  
415 - 592 - 7626

## WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.


## COMPONENTS



Mounting Base



Trim Tool





L-key

01

Using the L-key provided, slightly loosen the screws and keep about one thread engaged. Outer mounting base plate (01) and inner plate (02) should separate.



Insert the trim tool to the depth shown into the dash seam to create a gap. Insert the inner mounting base plate (02) into the gap within the corner.

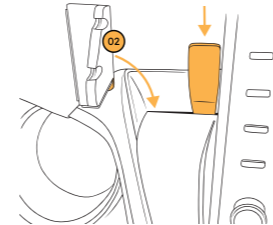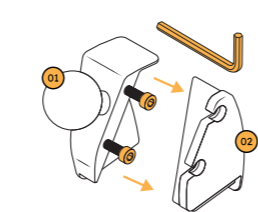

02

Hold the mounting base plate in place and remove the trim tool.



Insert the trim tool to the depth shown into the vertical dash seam to create a gap. Insert the outer mounting base plate (01) into the gap and remove the trim tool.

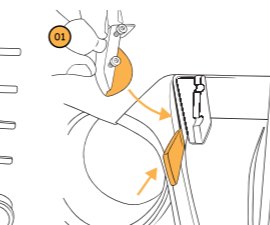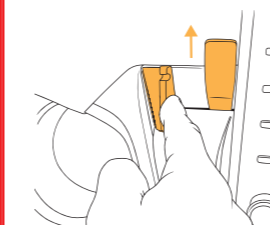

03


Press outer plate until you hear a click. The screws should align and the mounting base should appear joined as shown.

Alternate tightening screws until clamp has a snug fit. To ensure best fit, hold mounting base with opposite hand while tightening.

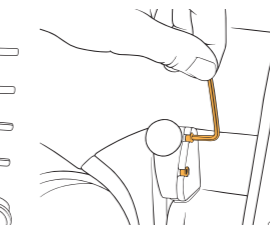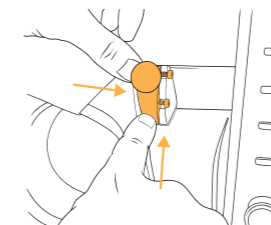


## POSITIONING

Fits on the driver side pocket between gauge cluster bezel and dash screen as shown.

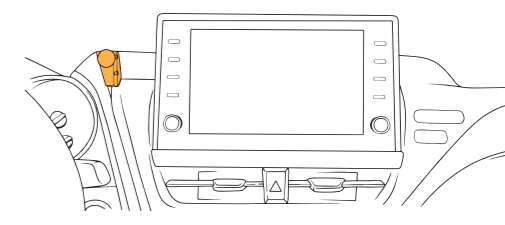

**OFFROAM**

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

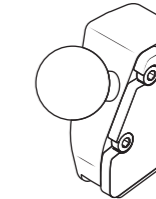

## **Mounting Base Installation Instructions**

Toyota Camry 2021-2024