



COMPONENTS

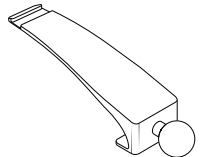

Mounting Base




Trim Tool

01

Gently insert the the trim tool fully into the seam between the clock display and dash as shown.


Insert the full wedged portion of the tool.

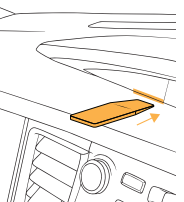

02


With the trim tool inserted, position the mounting base on the dash and align with the inner portion of the driver's side air vent as shown (01).

Gently push the front end of the mounting base into the open seam (02).

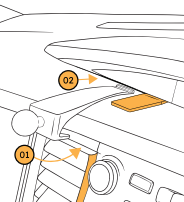

03


Once the mounting base is in position, gently remove the trim tool in the direction shown.

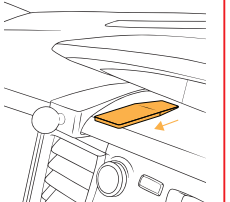

04


Gently slide mounting base toward inner side of air vent (where the louvers end) as shown.

To remove mounting base, repeat steps in reverse.

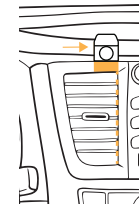

POSITIONING

Fits above center console air vent on the driver's side.

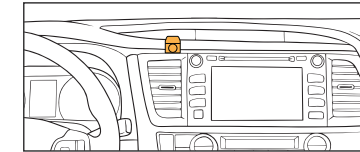

OFFROAMTM
offroam.com

Watch This Install




SUPPORT
hello@getoffroam.com
415 - 592 - 7626

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

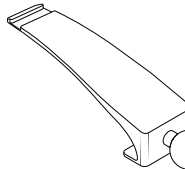

Mounting Base Installation Instructions

Toyota Highlander 2014 - 2019