



COMPONENTS

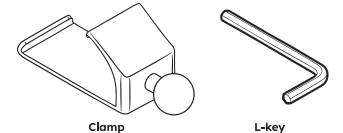

01

Using the L-key provided, loosen the clamping screws (2) to open up the clamp.


Leave a few threads engaged to keep the clamp in one piece.

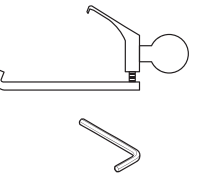

02


Hook the upper portion of the clamp into the TOP GAP & hook the bottom portion into the BOTTOM GAP.

(see image)

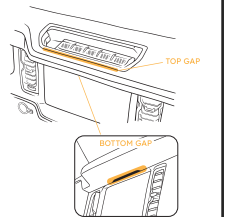


03

Hold the clamp in place, using the L-key alternately tighten both screws until hand tight.

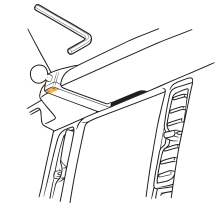

Fitment Note

This clamp will only fit in the area where the bottom gap exists.

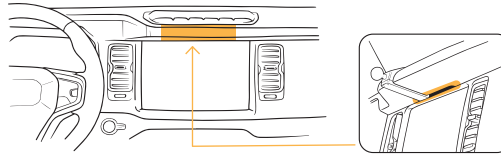

Still need help?



SCAN FOR VIDEO INSTRUCTIONS

SUPPORT
hello@getoffroam.com
415 - 592 - 7626


OFFROAMTM

offroam.com

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

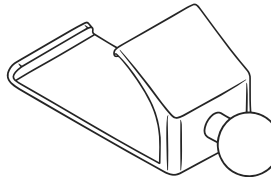

Clamp Installation Instructions

for 2021 - 2023 Ford Bronco