


## COMPONENTS

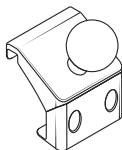


Mounting Base



L-key



Trim Tool

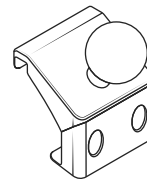

## Mounting Base Installation Instructions

Acura Integra 2023-2025

### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.


Do not fully remove the screws - keep about one thread engaged.



04

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

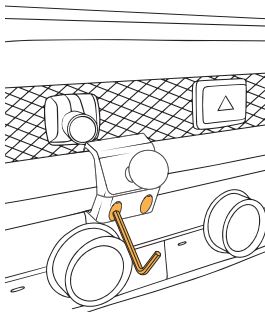


02

Insert the trim tool to the depth shown between the mesh and bezel to create a gap (01).


Insert the upper mounting base plate tab into that gap (02).

Remove trim tool.

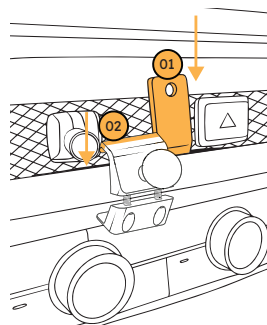

## POSITIONING

Fits in the areas as shown. Do not mount below hazard light button.

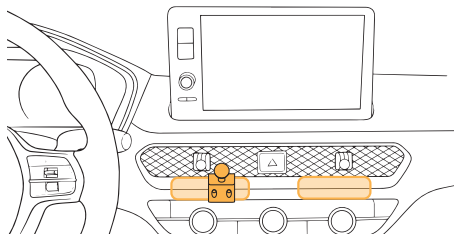


03

Insert the trim tool to the depth shown into the upper portion of the A/C module to create a gap (03).

Insert the lower mounting base plate tab into that gap (04).

Remove trim tool.

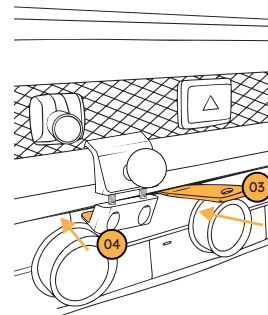

WATCH THIS INSTALL

