


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

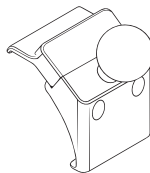


Mounting Base



Trim Tool



L-key

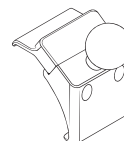


Mounting Base Installation

Chevrolet Silverado 1500 2014-2018
Chevrolet Silverado HD 2500/3500 2015-2019
Chevrolet Silverado HD 4500/5500/6500 2019+
GMC Sierra 1500 2014-2018
GMC Sierra HD 2500/3500 2015-2019

01

Using the L-key provided, fully loosen the screws and separate the small rear mounting base plate.

This rear mounting base plate will be inserted first, as shown in the next step.

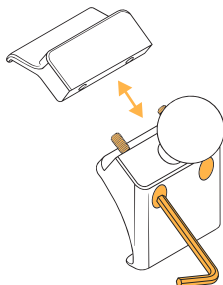


02

Insert the trim tool into the seam at the rear of the center console bezel, to the depth shown (01).


Position and fully insert the entire back wing of the rear mounting base plate into the gap created as shown (02), with the screw holes facing forward.

Remove the trim tool.

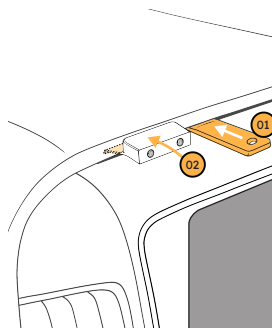


03

Next, position and align the main outer mounting base over the rear plate's holes (01).

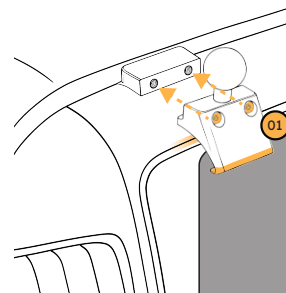


04

Using the L-key, rethread both screws back into the inner plate and fully hand tighten both until base has a snug fit.

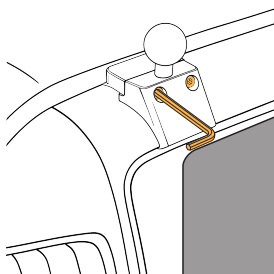

POSITIONING

Fits in the positions shown.

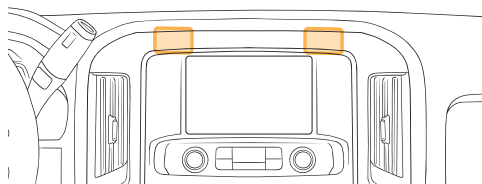

WATCH THIS INSTALL

