

Watch This Install



SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.


COMPONENTS

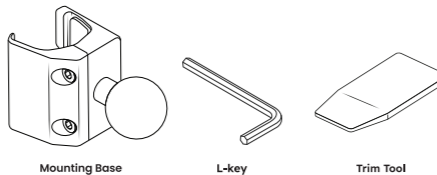

01


Using the L-key provided, slightly loosen the screws to ensure the outer plate moves.

Do not fully remove the screws - keep about one thread engaged.

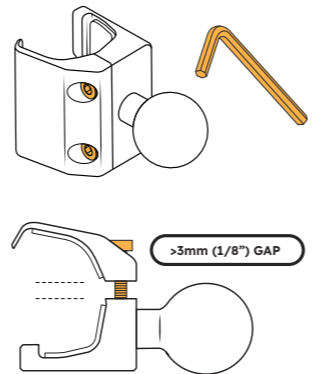

02

Gently insert the Offroam trim tool into the seam between the dash and vent bezel trim. Insert and hook the screw-side of the mount base into the created trim gap (01). Hook the opposite side of the mount base around the inner air vent bezel (02).

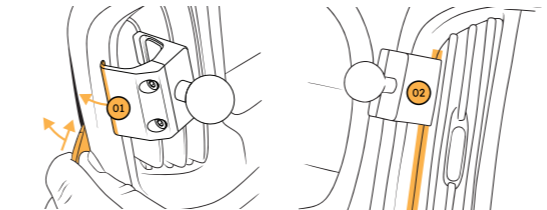


03

Gently slide out the Offroam trim tool.


Alternate tightening screws until clamp has a snug fit.

To ensure best fit, hold mounting base with opposite hand while tightening.

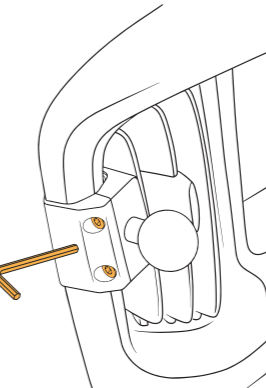


POSITIONING

Fits on the outer straight-edge of either the driver or passenger side air vents on center console.

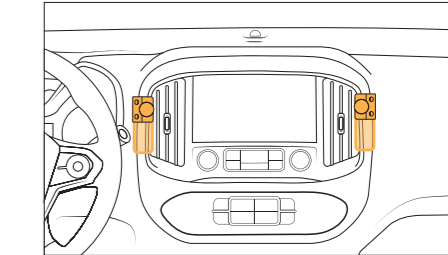

OFFROAD

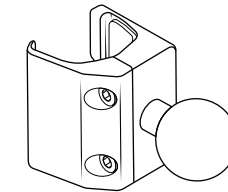

Mounting Base Installation Instructions

Chevy Colorado 2015-2022
GMC Canyon 2015-2022