


OFFROOM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

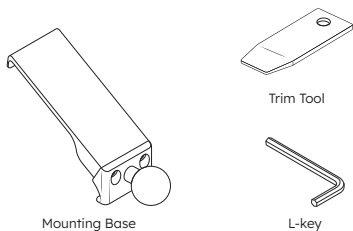

01


Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

Do not fully remove the screws - keep about one thread engaged.

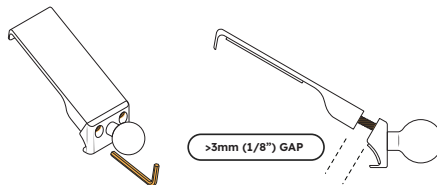

POSITIONING



Mounting base may be positioned along the straight portion of the seam as shown.

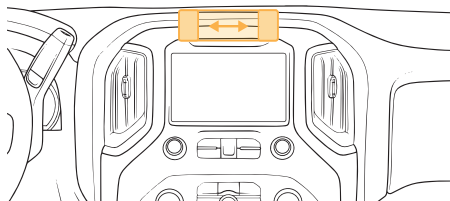

03

Alternate tightening screws until the mounting base has a snug fit around air vent bezel.

To ensure the best fit possible, hold base with hand while tightening

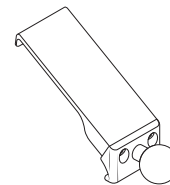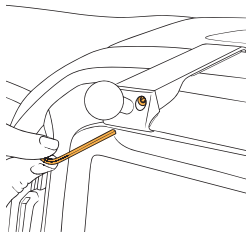

Mounting Base Installation


Chevy Silverado 2019+ | Silverado HD 2020+
GMC Sierra 1500 2019+ | Sierra HD 2020+
(7" & 8" Touchscreen Display)

02

Insert the trim tool (01) into the upper dash gap to the depth shown.

Hook the rear mounting base plate (02) into that expanded gap. Remove the trim tool.

Hook the front mounting base plate (03) as shown.

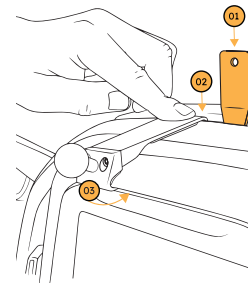

WATCH THIS INSTALL

