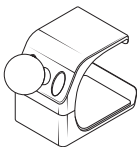


COMPONENTS

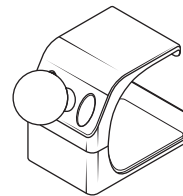
Mounting Base



L-key



Trim Tool

**Mounting Base
Installation Instructions**Chevrolet Suburban | Tahoe 2021-2024
GMC Yukon | Yukon XL 2021-2024**WARNINGS**

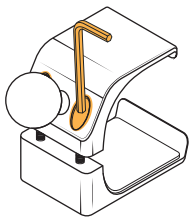
- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

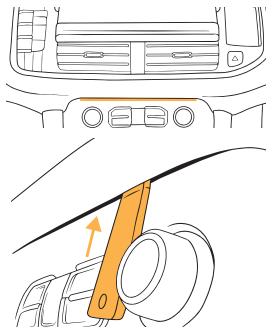
01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

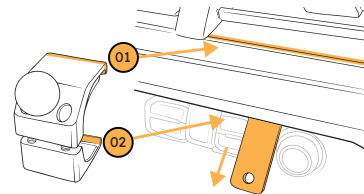
Do not fully remove the screws - keep about one thread engaged.

**02**

In the seam indicated below the center console vents, insert the trim tool to the depth shown.

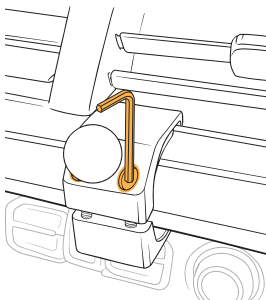
**03**

Position the upper mounting base plate lip over the console vent seam as shown (01). Insert the lower mounting base plate lip into the console seam gap created with the trim tool (02). Remove trim tool.

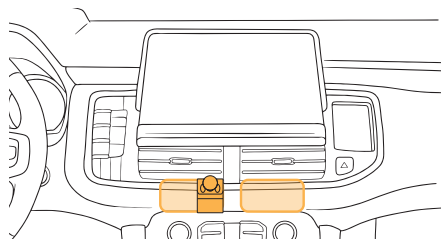
**04**

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

**POSITIONING**

Fits in the areas as shown.



WATCH THIS INSTALL

