


# OFFROOM

## WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


## COMPONENTS

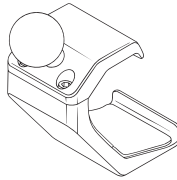

Mounting Base



L-key

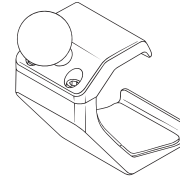


## Mounting Base Installation

Toyota Grand Highlander 2024+

01

Using the L-key provided, slightly loosen the screws to ensure the lower plate moves.


Do not fully remove the screws - keep about one thread engaged.

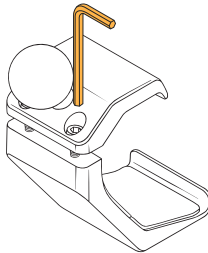

02

Open the centre console air vent louver to the full air flow position. Place the upper mounting base plate lip, around the lower vent bezel as shown (01).


Then wrap the lower mounting base plate lip around the underside of the center console feature as shown (02).

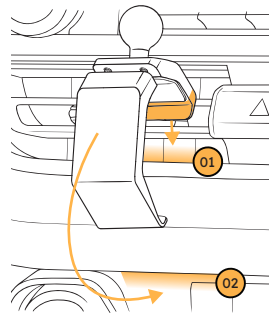

03


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure best fit, hold mounting base into position with as shown while tightening.

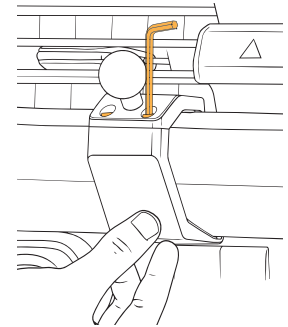

## POSITIONING

Fits in the positions shown.

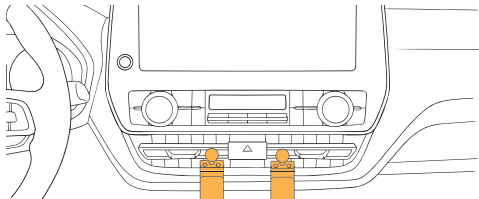

WATCH THIS INSTALL

