


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

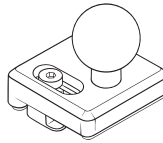


Mounting Base



Trim Tool



L-key

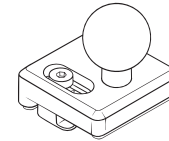


Mounting Base Installation

Toyota Tacoma 2016-2023

01

Using the L-key provided, slightly loosen the screws to ensure the lower plate moves.


Do not fully remove the screws - keep about one thread engaged.

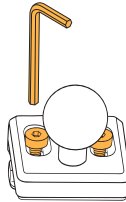

02

Above the left side of the infotainment screen, insert the Offroom trim tool into the first (rear) trim seam (01).


Adjacent the inserted Offroom tool, insert the mounting base rear lip (02) into that seam.

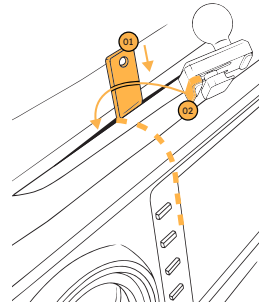

03

Remove the Offroom trim tool, and reinsert the trim tool at that same position, into the second (front) trim seam (02).

Press down to insert the mounting base middle lip into that front seam.


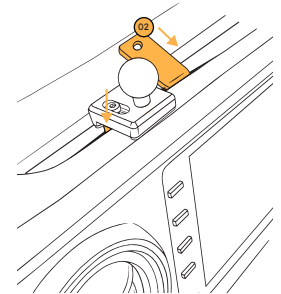


04

OPTIONAL


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To optionally position the mounting base even closer to the driver side, while pressing down, slide the base in the direction shown (01) prior to tightening.

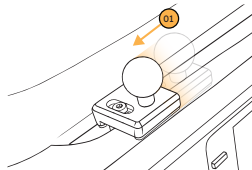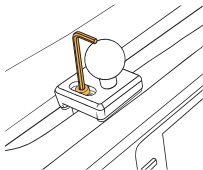

POSITIONING

Fits in the areas shown.

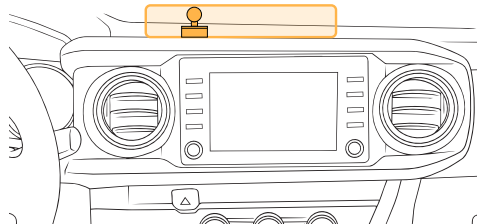

WATCH THIS INSTALL

