


### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

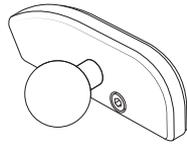

Mounting Base



L-key

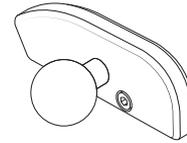


## Mounting Base Installation

Dodge Challenger 2015-2023

01


Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screw - keep about one thread engaged.

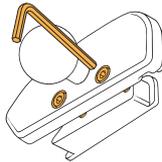

02

Position the mounting base into the top of the driver side air vent, with the inner mounting base plate lip positioned behind the back edge of the air vent bezel.

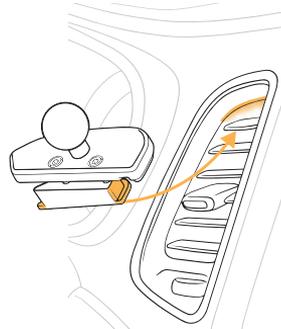

03


The Offroom elastomer liner on the back of the mounting base plate, should sit on the dash surface outside the air vent bezel as shown.



04


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure best fit, press the mounting base into the corner as shown while tightening.

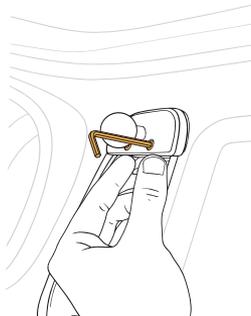

## POSITIONING

Fits in the position shown.

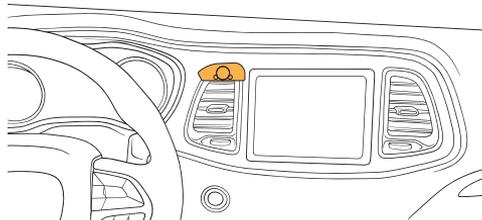

WATCH THIS INSTALL

