


COMPONENTS




Mounting Base  
L-key

01


Using the L-key provided, loosen the screws to open up the mounting base.

Do not fully remove screws, keep about one thread engaged.

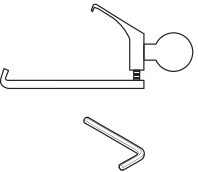


02

Hook the bottom mounting base plate into the BOTTOM GAP & hook the top plate into the TOP GAP as shown.

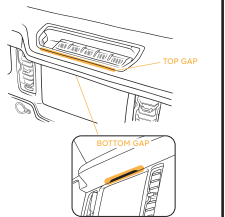


03

Hold the mounting base in place and using the L-key alternately tighten both screws until hand tight.

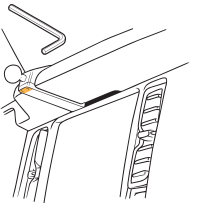

Fitment Note

Mounting base fits in the area where the bottom gap exists.

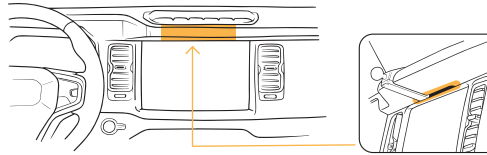

Watch This Install




**OFFROAM**<sup>TM</sup>  
offroam.com

#### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

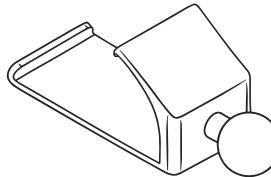

# Mounting Base Installation Instructions

Ford Bronco 2021-2025