
OFFROAM

WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

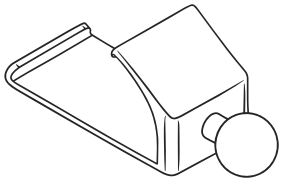

Mounting Base

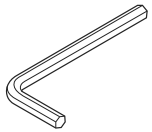

L-key

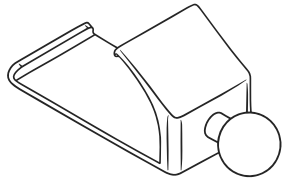


Mounting Base Installation

Ford Bronco 2021+

01


Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screws - keep about one thread engaged.

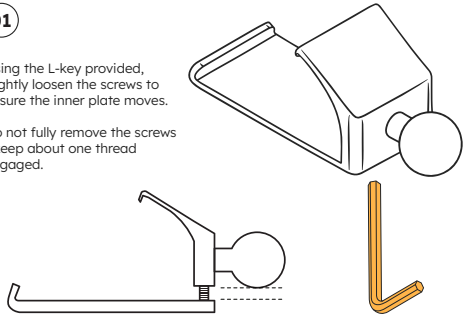


02

Hook the bottom mounting base plate into the bottom gap (01) then hook the top plate into the top seam (02) as shown.

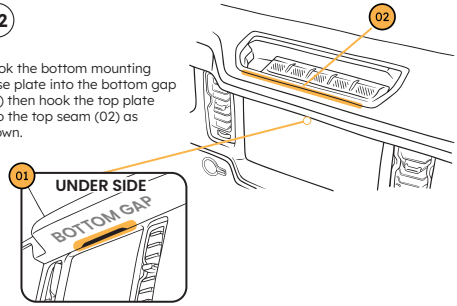


03

Hold the mounting base in place and using the L-key alternately tighten both screws until hand tight.

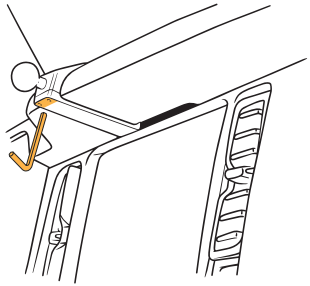

POSITIONING

Mounting base can be positioned anywhere the bottom gap exists.

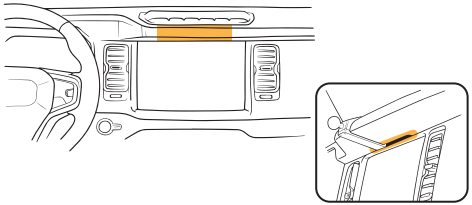

WATCH THIS INSTALL