


# OFFROAD

## WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

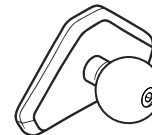


## Mounting Base Installation Instructions

Ford F-150 2015-2020


Ford Expedition 2018-2021

Ford Super Duty 2017-2021 | Super Duty 2022 (XL & XLT)

## COMPONENTS

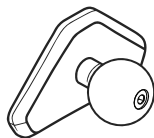


Mounting Base



L-key

01

Using the L-key provided, slightly loosen the mounting base screw to ensure both plates move.

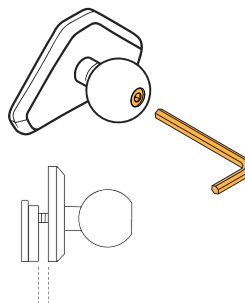

02

Open the air vent louvers to full air flow position.


Push the mounting base into the upper inner corner between the louvers and air vent bezel.



03


Continue holding mounting base while tightening.

Using the L-key, hand tighten the screw until the mounting base has a snug fit.

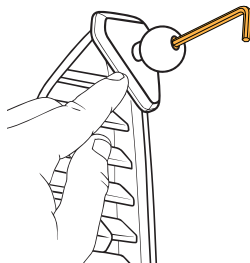

## POSITIONING

Fits in the upper inner corners of the center console as shown.

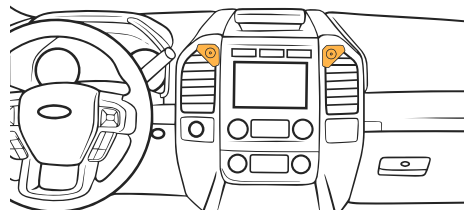

WATCH THIS INSTALL

