

Still need help?



SCAN FOR VIDEO INSTRUCTIONS

SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS

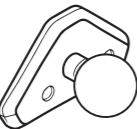

Clamp




L-key

01

Using the L-key provided, slightly loosen the two screws to ensure the backing plate moves.

Do not fully remove the screws - keep a few threads engaged.

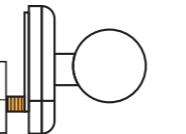


02

Place the clamp in the upper inner corner of the left or right center air vent.

*See "Fitment Note" section of the instructions if further clarification is needed.


Left center air vent shown

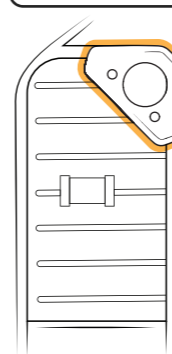

03


Hold the clamp in the corner while tightening screws.

Alternate tightening 5-6 times until both screws are equally snug.

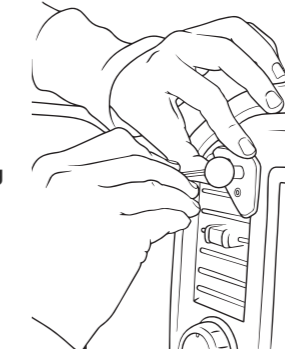


Fitment Note

Designed to fit the inner upper corner of the center air vents only. (As shown below).

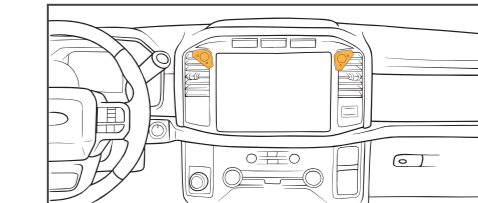



offroam.com

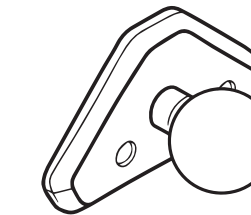

Clamp Installation Instructions

for 2021-2023 Ford F-150