

## Still need help?



SCAN FOR VIDEO INSTRUCTIONS

## SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

### COMPONENTS

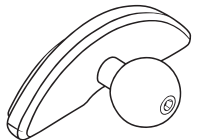

Clamp




L-key

01

Using the L-key provided, slightly loosen the screw to ensure the backing plate moves.



Do not fully remove the screw - keep about one thread engaged.

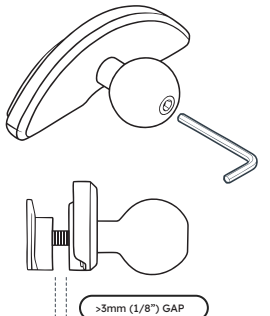

02

Before placing clamp in position, rotate air vent to desired position.


NOTE: Clamp will lock air vent rotation

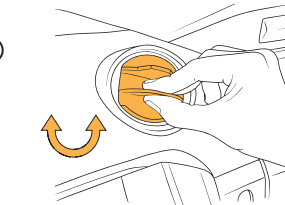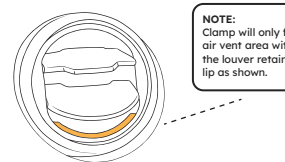

03

Place clamp in position and ensure that the rear backing plate catches the louver retainer lip.

Tighten screw until clamp has a snug fit.

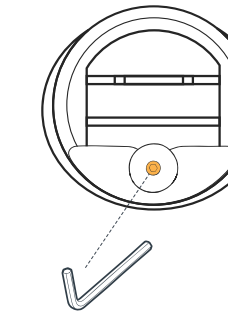


### FITMENT NOTE

Clamp installs on any center air vent.

#### STANDARD PACKAGE DASH




#### COMPETITION PACKAGE DASH (WITH GAUGES)

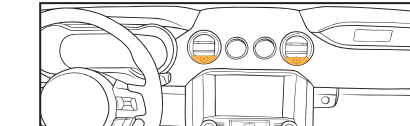



offroam.com

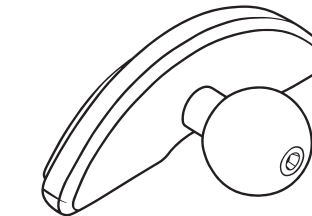

## Clamp Installation Instructions

for 2015-2023 Ford Mustang