


COMPONENTS

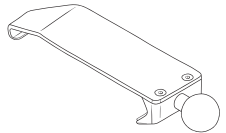

Clamp




L-key

01

Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

Do not fully remove the screws - keep about one thread engaged.

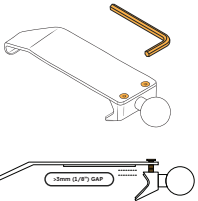


02

Insert rear of the mounting base into the forward seam on the dash (01) and position the clamp (02) over the instrument side of the dash.




03

Align the right edge of the base with left edge of upper dash beam for optimal fit. Alternately hand tighten screws using the provided L-key to a snug fit.

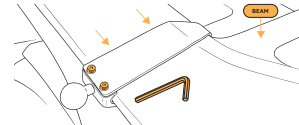

POSITIONING

Dash mount fits on driver's side of dash to left of drivers vent and upper dash beam.

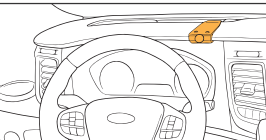

Watch This Install




SUPPORT
hello@getoffroam.com
415 - 592 - 7626

OFFROAMTM
offroam.com

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

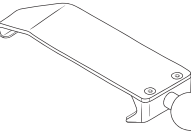

Dash Mount Installation Instructions

Ford Transit 2020+