


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
 - Check vehicle compatibility before install to avoid damage to the vehicle mount point.
 - Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
 - Do not use with 3rd party extension arms. Adhere to our phone weight limits.
 - Mount electronics away from airflow to prevent heat damage.
- Note: May leave pressure lines with Ridgeline 2016-2025 | Passport 2019-2025 | Pilot 2016-2022, soft touch dashboards.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or reinstallation of any product.


WATCH THIS INSTALL

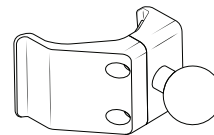


Mounting Base Installation Instructions

Honda Ridgeline 2016-2025 | Passport 2019-2025 | Pilot 2016-2022

COMPONENTS




L-key

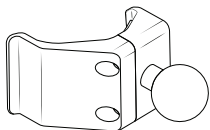

Mounting Base


01

Using the L-key provided, slightly loosen the screws, leaving about one thread still engaged.

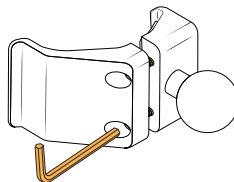


02

Insert the long end of the mounting base into the seam between the instrument cluster and the centre console vent (01)

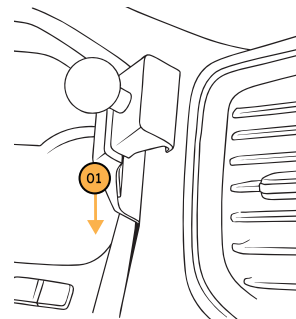

03


Hook the short end of the mounting base over the centre console vent bezel (02).

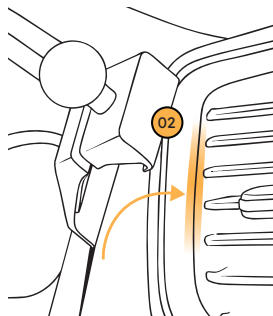

04

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

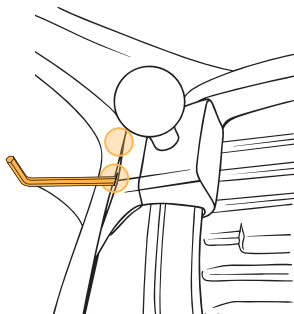

POSITIONING

Fits in the position shown.

