


OFFROOM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS



Mounting Base




2 Screws



L-key


POSITIONING

One or more Offroom mounting bases may be mounted in any of the 6 positions shown.

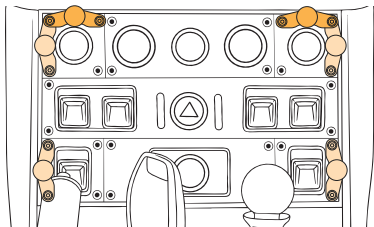

01



Using the L-key, remove an adjacent pair of original Grenadier center control panel screws. Store both screws in a safe location.

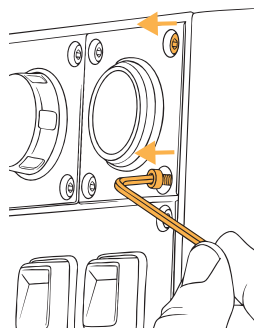

02

Position Offroom mounting base over the empty screw holes, and hand thread the provided Offroom screws until they engage.

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

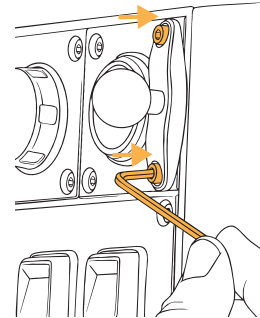

Mounting Base Installation Instructions

INEOS Grenadier 2022-2025

WATCH THIS INSTALL

