


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

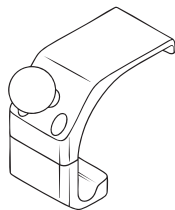


Mounting Base



Trim Tool



L-key

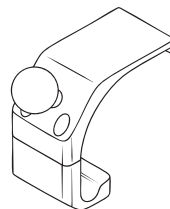



Mounting Base Installation

Land Rover Defender 2020+

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screws - keep about one thread engaged.

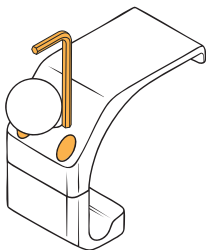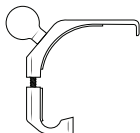


02

Insert the trim tool into the seam between the vent bezel edge and the soft touch upper dash to the depth shown (01).

Insert the upper mounting base plate lip (02) into the gap created overboard of the trim tool and vent bezel edge.


Rotate the lower mounting base plate lip around the lower radius of the soft touch dash and press upward (03).

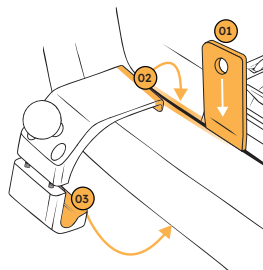

03

Ensure the upper mounting base plate stays in position by firmly pressing downward on the upper mounting base plate lip.


Remove the trim tool.

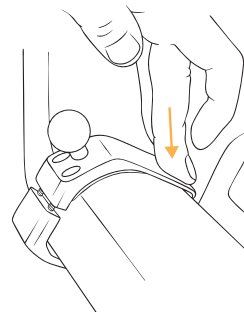

04


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

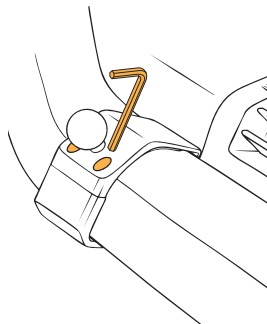

POSITIONING

Fits in the positions shown.

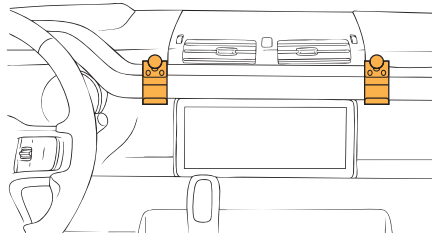

WATCH THIS INSTALL

