


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before instal to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

COMPONENTS

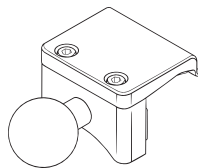


Mounting Base



Trim Tool



L-key

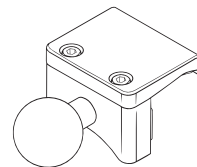


Mounting Base Installation

Lexus RX 350 | 550 2023+
(14.0" Touchscreen Display)

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves. Do not fully remove the screws - keep about one thread engaged.

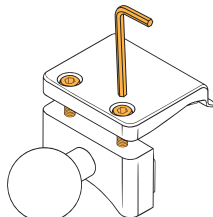


02

Insert the trim tool just to the right of the vehicle Start/Stop button to the depth shown (01).

Then align the the mounting base with the centerline of the Start/Stop button (02).


Insert the upper mounting base plate lip into the gap created as shown. Rotate the mounting base downwards (03).

Remove the trim tool.

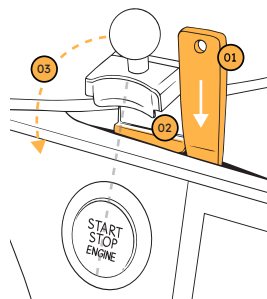

03


Align the bottom base plate with the outer bezel of the Start/Stop button and push into position.

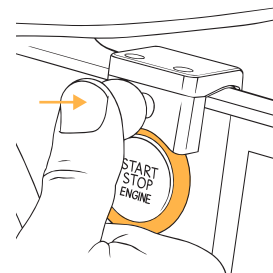

04


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure best fit, hold mounting base into position with as shown while tightening.

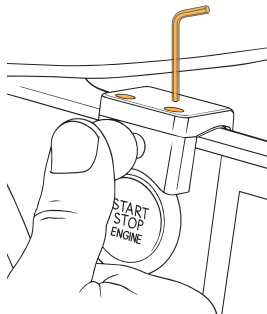

POSITIONING

Fits in the position shown.

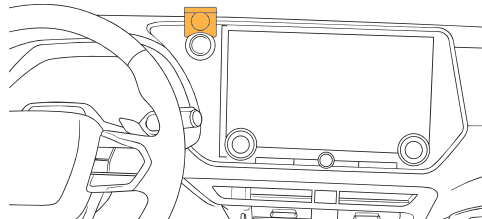

WATCH THIS INSTALL

