

Watch This Install



SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam, shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS

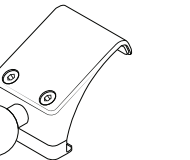

Clamp





L-key

01

Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

Do not fully remove the screws - keep about one thread engaged.

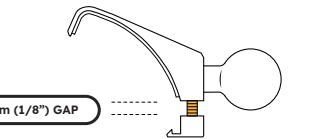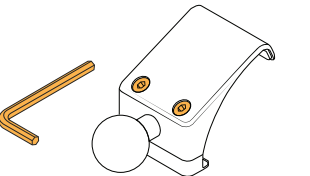


>3mm (1/8") GAP

02

Hook top clamp plate (01) onto the the edge of the center console tray.


Then gently push bottom clamp plate (02) into the bottom seam until a snap sound is heard.

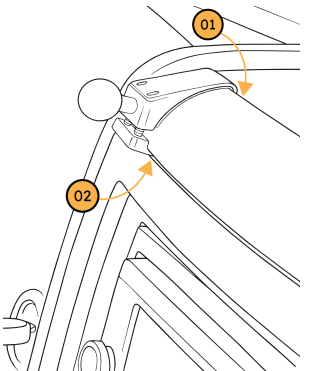

03


Alternate tightening screws until clamp has a snug fit using the L-key provided.

To ensure the best fit possible, hold clamp with hand while tightening.

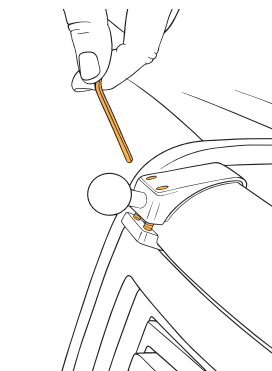


POSITIONING

Clamp is designed to fit either the driver or passenger side of the center console.

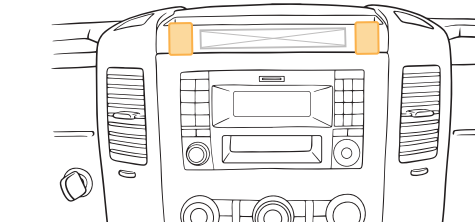



offroam.com

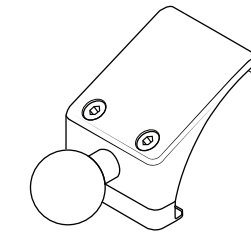

Clamp Installation Instructions

Mercedes-Benz Sprinter 2007-2018
With Non-Lid Storage Compartment