



## COMPONENTS

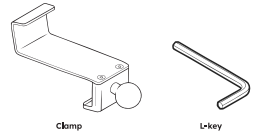

01


Open the clamp by loosening the two screws on the top.

Do not fully remove the screws - keep a few threads engaged.

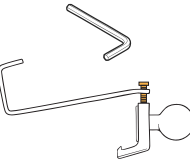

02


Slide fully into the larger portion of the driver or passenger side dash pocket.

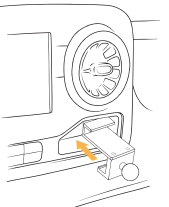

03


Alternate tightening screws until clamp has a snug fit around dash.

To ensure the best fitment possible, push clamp with hand while tightening.

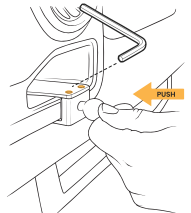

Fitment Note

Designed to only fit within larger portion of the OEM dash pockets (shown below).

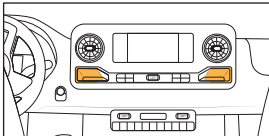

Still need help?



SCAN FOR VIDEO INSTRUCTIONS


SUPPORT  
hello@getoffroam.com  
415 - 592 - 7626



#### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

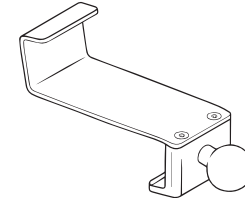

## Dash Mount Installation Instructions

for 2019-2023 Mercedes-Benz Sprinter