


OFFROOM

COMPONENTS


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

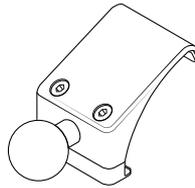

Mounting Base

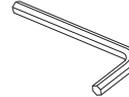

L-key

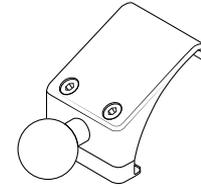


Mounting Base Installation

Mercedes-Benz Sprinter 2007-2018
With Non-Lid Stowage Compartment

01

Using the L-key provided, slightly loosen the screws to ensure the bottom mounting base plate moves.


Do not fully remove the screws - keep about one thread engaged.

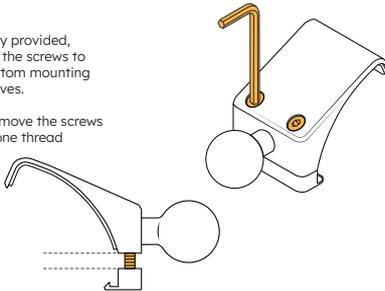

02

Hook top mounting base plate (01) onto the edge of the center console tray.


Then gently push bottom mounting base plate (02) into the bottom seam until a small click is heard.

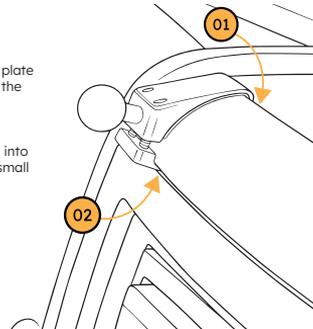

03


Using the L-key, alternate tightening screws until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

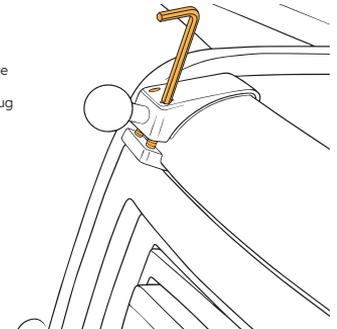

POSITIONING

Fits on either side of the center console as shown.

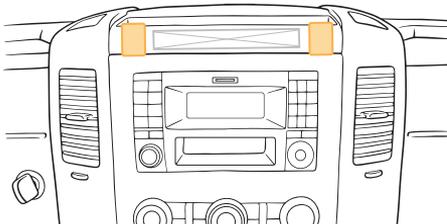

WATCH THIS INSTALL

