


OFFROAM

COMPONENTS


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

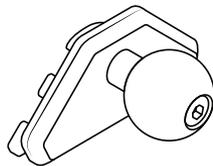

Mounting Base



L-key

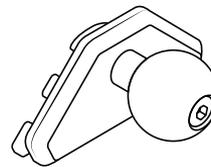


Mounting Base Installation

Nissan Frontier 2009-2021
Nissan Xterra 2009-2015

01

Using the L-key provided, slightly loosen the screw to ensure the inner plate moves.


Do not fully remove the screw - keep about one thread engaged.

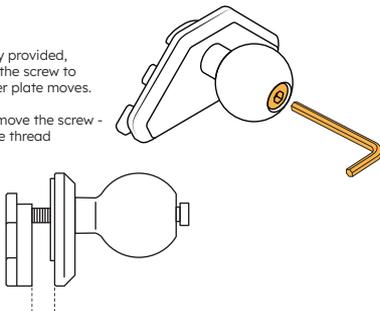

02

Place the mounting base in the upper outer corner of either the driver or passenger side center console air vents.


Ensure the rear mounting base plate tabs are positioned behind the air vent bezel.

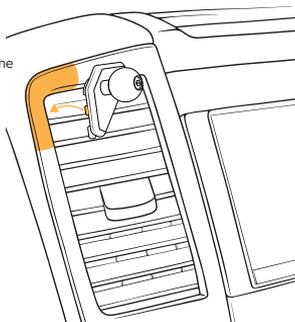

03


Tighten screw until the mounting base has a secure fit to the air vent bezel.

To ensure best fit, hold mounting base with opposite hand while tightening.

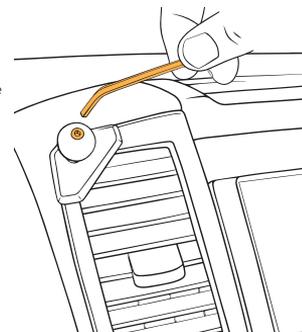

POSITIONING

Fits on either side of the center console as shown.

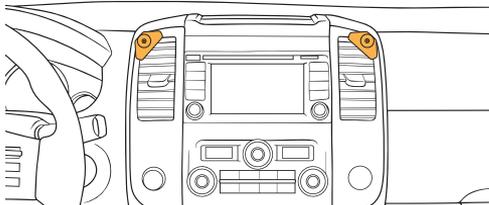

WATCH THIS INSTALL

