


OFFROAD

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before instal to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

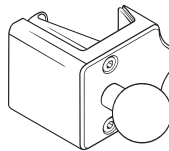


Mounting Base



Trim Tool



L-key

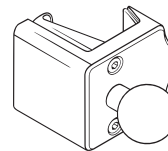


Mounting Base Installation

RAM Promaster 2022+

01

Using the L-key provided, fully loosen the screws and separate the small inner mounting base plate.

This inner mounting base plate will be inserted first, as shown in the next step.

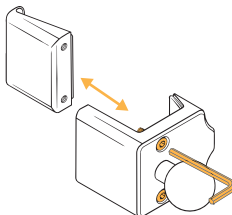


02

Insert the trim tool below the double vent centreline, at the position and depth shown (01).

Position and fully insert the back lip of the inner mounting base plate into the gap created, across the double vent centreline (02) with the screw holes facing forward.


Remove the trim tool.

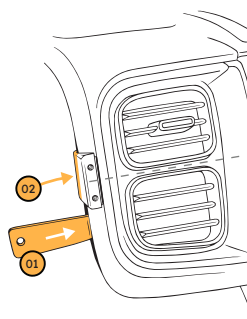

03


Next, position and align the main outer mounting base over the rear plate's holes (01).

Hand tighten both screws until mounting base has a snug fit.

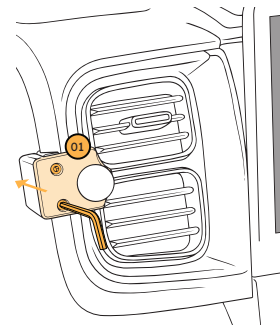

POSITIONING

Fits in the position shown.

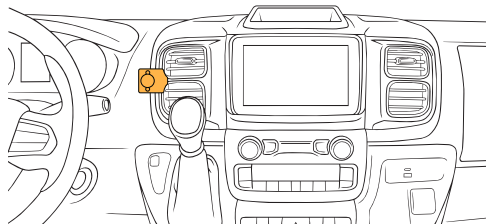

WATCH THIS INSTALL

