




- 01
- Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.
- Do not fully remove the screws - keep about one thread engaged.

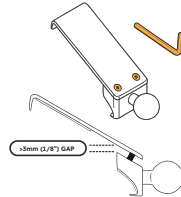

- 02
- Hook the front clamp plate (01) in the seam above the touchscreen.
- Then hook the rear clamp plate (02) in the seam in the upper dash surface.

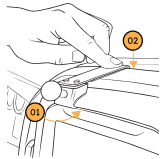


- 03
- Alternate tightening screws until clamp has a snug fit around air vent bezel.
- To ensure the best fit possible, hold clamp with hand while tightening.

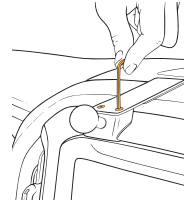

POSITIONING

Clamp may be positioned along the straight portion of the seam as shown.

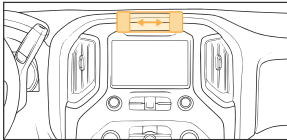

Watch This Install




SUPPORT
hello@getoffroam.com
415 - 592 - 7626

OFFROAMTM
offroam.com

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

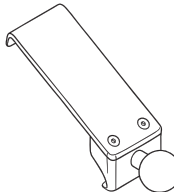

Clamp Installation Instructions

Chevy Silverado | Silverado HD | GMC Sierra 1500 | Sierra HD
(7" & 8" Touchscreen Display)