


OFFROOM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


WATCH THIS INSTALL

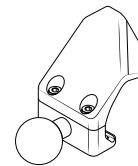

Mounting Base Installation Instructions

Subaru Crosstrek 2018-2023
Subaru Forester 2019-2024
Subaru Impreza 2017-2023


COMPONENTS

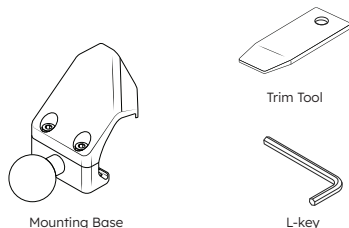

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.


Do not fully remove the screws - keep about one thread engaged.

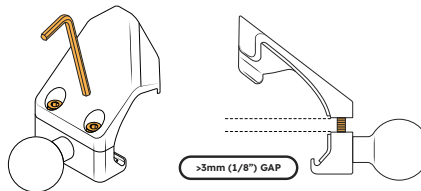

02

Insert the upper outer mounting base lip (01) into the seam between the air vent and dash as shown, followed by the upper inner base lip (02).


Insert the lower mounting base lip (03) behind the air vent bezel.

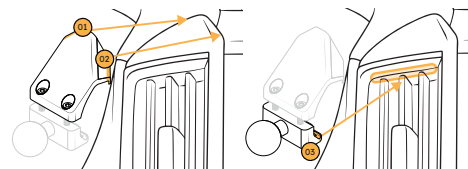

03


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

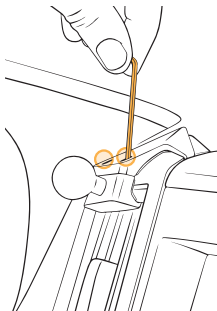

POSITIONING

Fits the driver side air vent as shown.

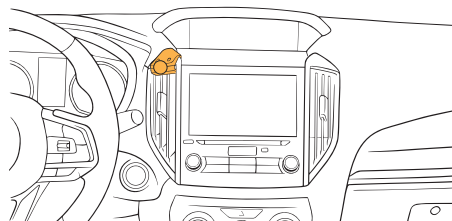

NOTE

IF REQUIRED:

Insert the trim tool into the left or right seam as shown to allow insertion of the upper mounting base lip, then proceed with step 03



Bottom mounting base lip catches the air vent bezel as shown.

