# OFFROAM

#### WARNINGS

- . Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
  Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the inchedings, stills, and phispical daily required to properly perform an installation. Officers affect the not lobality for damage or injury resulting from the installation or use of any Officers or third party products. It is your responsibility or automaps or injury resulting from the installation or use of any Officers or third party products. It is our responsibility to ensure that all products are installed in determine with fixed laws and regulations and an amount or so to allow a while to be operated sofely and without distraction. Offrom product warranties do not cover the installation, removal or re-installation of any product.



## Mounting Base Installation Instructions

Subaru Crosstrek 2024-2025 | Impreza 2024-2025 | WRX 2022-2025

### COMPONENTS








L-key



Using the L-key provided, slightly loosen the screw to ensure the inner plate moves.  $\,$ 

Do not fully remove the screw - keep about one thread engaged.






Center the vehicle's center console air vent louver.

Align the 3 tabs of the mounting base with the gap behind the air vent bezel, as shown.


Push the base firmly into the corner until the tabs are fully inserted behind the air vent bezel.






Using the L-key, hand tighten the screw until the mounting base has a snug fit.

Hold the base in position by firmly pushing it into the corner while tightening.

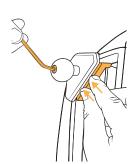

### POSITIONING

Fits the upper outer corners of the center console air vents as shown.

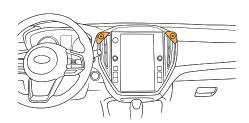

WATCH THIS INSTALL

