### OFFROAM

#### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
  Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-institution instructions and axice are provided for your convenience. It is your responsibility to determine it you have the incohedings, stills, and physical daility required to properly perform an instrubition, Offroan-mitel flow no lability for damage or injury resulting from the instation or use of any Offoam or thild part products. It is your responsibility resulting the neurism of a physical results are instrumed in a structure of the structure of

#### COMPONENTS



Mounting Base



01

Using the L-key provided, slightly loosen the screw to ensure the inner plate moves.

Do not fully remove the screw - keep about one thread engaged.



# (03)

Using the L-key, hand tighten the ball mount screw until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.





Fits the upper outer corners of the center console air vents as shown.





## Mounting Base Installation Instructions


Subaru Crosstrek 2024 Subaru Impreza 2024 Subaru WRX 2022-2024



Center the vehicle's vertical air vent louver.

Insert the 2 tabs of the mounting base into the gap just behind the air vent bezel as shown.

Apply outward and upward pressure on the mounting base to keep it tight to the corner.

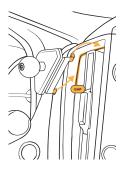

WATCH THIS INSTALL

