


OFFROAD

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before instal to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

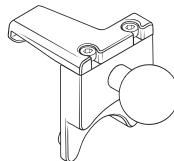


Mounting Base



Trim Tool



L-key

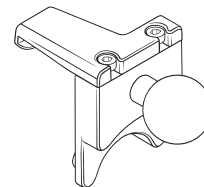


Mounting Base Installation

Subaru Outback 2026+

01


Using the L-key provided, loosen the screws to fully separate the upper and lower mounting base plates.

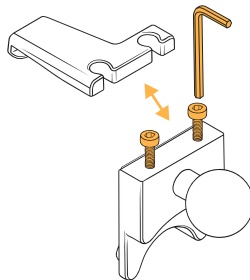

02

Insert the trim tool (01) on a shallow angle under the rear of the infotainment bezel, just to the left of the outer edge of the volume button.

Hook the rear lip of the upper mounting base plate around the bezel edge, with the upper plate sitting flat atop the infotainment bezel (02).

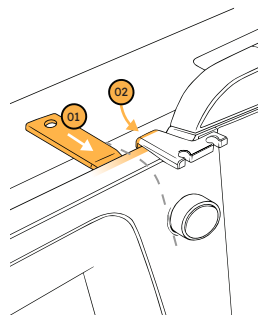


03

Next place the main lower mounting base plate (03) directly under the upper plate, with the lower edge arc sitting directly above the volume knob.


Remove the trim tool (04).

Alternately hand tighten screws until mounting base has a snug fit around bezel.

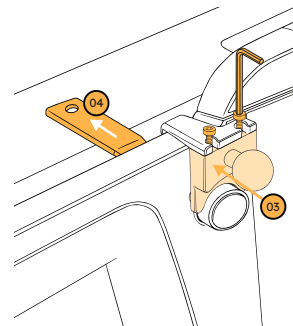

POSITIONING

Fits in the position shown.

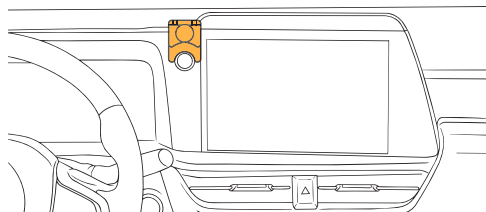

WATCH THIS INSTALL

