

Watch This Install




SUPPORT
hello@getoffroam.com
415 - 592 - 7626


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS



Mounting Base





L-key

01

Using the L-key provided, slightly loosen the screws to ensure the lower plate moves.



Do not fully remove the screws - keep about one thread engaged.

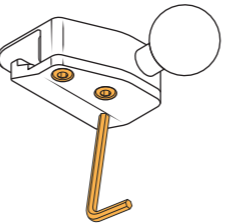

>3mm (1/8") GAP

02


Position the lower mounting base lip (01) behind the air vent bezel. Then slide the tongue of the upper mounting base (02) into the seam between the vent bezel and dash as shown.

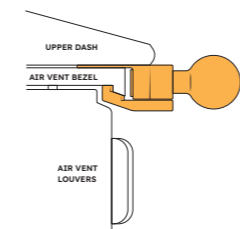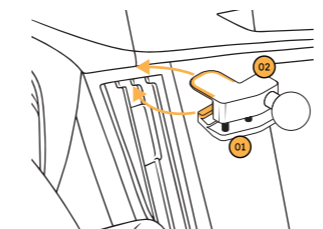

03


Using the L-key, alternate tightening screws until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

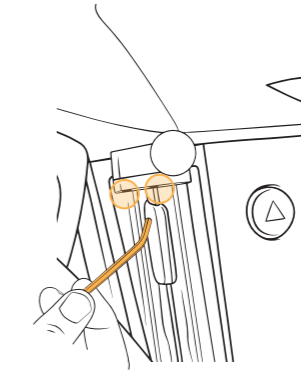


POSITIONING

Fits the driver side air vent as shown.

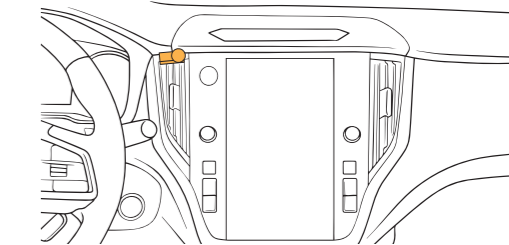

OFFROAM

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.



Mounting Base Installation Instructions

Subaru Outback 2020-2024
Subaru Legacy 2020-2024