## OFFROAM

#### WARNINGS

- . Do not mount accessories in front of or near the path of airbag deployment. Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- · Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- · Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

### COMPONENTS










Using the L-key, alternate tightening screws until mounting base has a snug fit.


To ensure the best fit possible, hold mounting base while tightening.

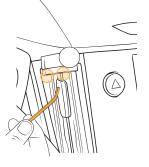

(01)


Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.


Do not fully remove the screws - keep about one thread engaged.



#### POSITIONING

Fits the driver side air vent as shown.






# **Mounting Base** Installation Instructions

Subaru Outback 2020-2025 Subaru Legacy 2020-2025

(02)

Position the lower mounting base lip (01) behind the air vent bezel. Then slide the tongue of the upper mounting base (02) into the seam between the vent bezel and dash as shown.



WATCH THIS INSTALL

