

### WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad. shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.


### Watch This Install



### COMPONENTS



Mounting Base




L-key

01

Using the L-key provided, slightly loosen the screw to ensure rear plate moves.

Do not fully remove screw - keep about one thread engaged.

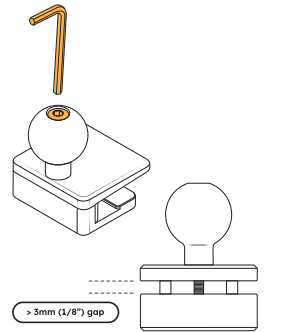


02

Open the vehicle air vent louver to full air flow position.

Place the mounting base through the lip of the air vent.


Move the mounting base as close as possible to the outer edge where the lip is stiffer as shown.

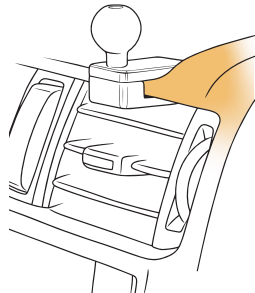

03


Using the L-key, tighten screw until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

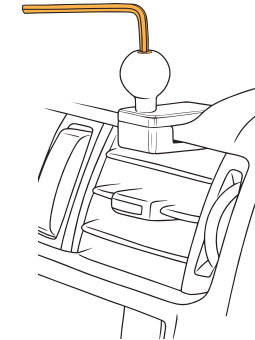


### Fitment Note

Fits OEM center vents only. Remember to position as close as possible to the outer edge of lip.

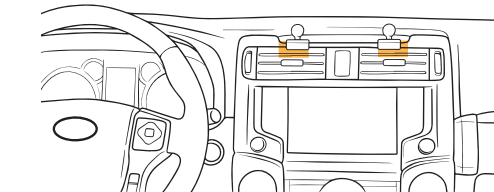

**OFFROAM**

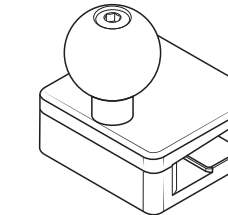

## **Mounting Base Installation Instructions**

Toyota 4Runner 2010-2024