

Watch This Install




SUPPORT
hello@getoffroam.com
415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS

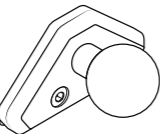

Mounting Base





L-key

01

Using the L-key provided, slightly loosen the screws.



Do not fully remove the screws - keep about one thread engaged.

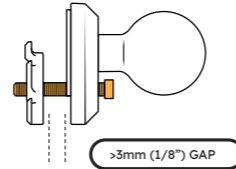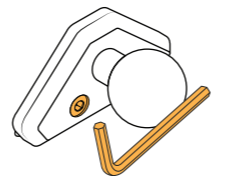

>3mm (1/8") GAP

02

Insert the rear tabs of the mounting base into the vertical gap and under the horizontal lip of the air vent bezel as shown. Apply upward and outward pressure on the mounting base into the corner of the air vent bezel.

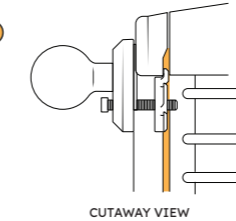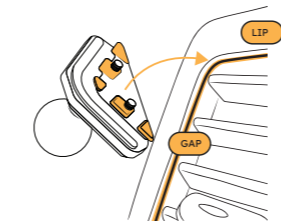


CUTAWAY VIEW

03

Keep outward and upward pressure on the mounting base during tightening.


Alternate tightening screws until clamp has a snug fit.

To ensure best fit, hold mounting base with opposite hand while tightening.

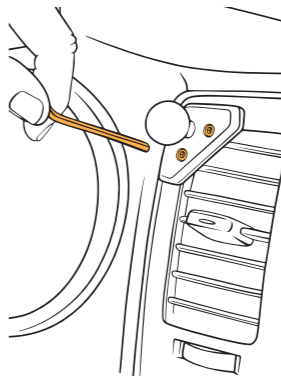


POSITIONING

Fits on the upper outer corners of either the driver or passenger side air vents on center console.

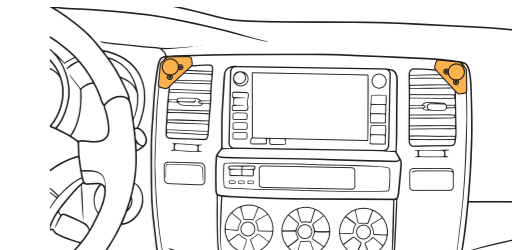

OFFROAD

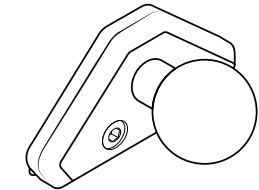

**Mounting Base
Installation Instructions**

Toyota 4Runner 2003-2009