
OFFROAM

## WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


## COMPONENTS

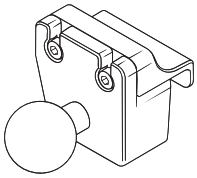

Mounting Base



L-key

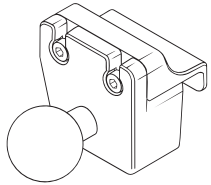


# Mounting Base Installation

**Toyota Camry 2025+**

### 01


Using the L-key provided, loosen the screws to fully separate the front and rear mounting base plates.

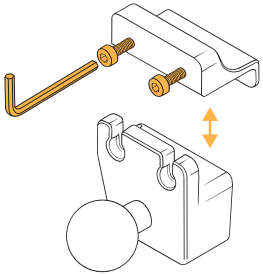

### 02

Firmly insert the smaller rear mounting base plate with its curved radius facing up and screws facing down, into the dash seam as shown (01).


Rotate the plate upwards 90 degrees (02) so the screws are now pointed towards you. The plate's curved radius should contact and match the dash.

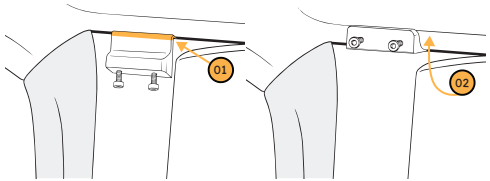


### 03

Position the front mounting base plate just below the rear plate and slide it upwards until it stops fully against the screws (03).


Then slide the entire mounting base to the left (04) until the lip of the front plate shown in yellow is fully behind the dashboard black piano trim.

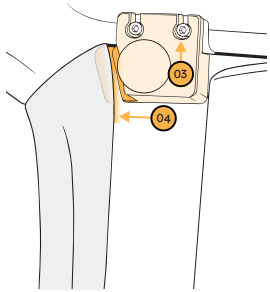


### 04


Using the L-key hand tighten screws until the mounting base has a snug fit around bezel.

For best fit, hold the front mounting base plate with hand during tightening.

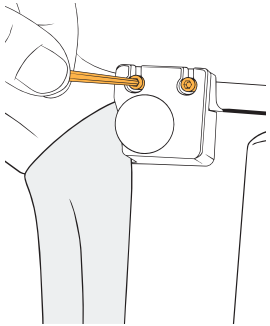

## POSITIONING

Fits in the position shown.

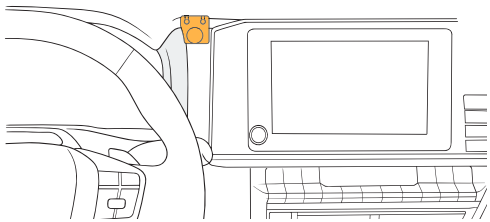

**WATCH THIS INSTALL**