




COMPONENTS

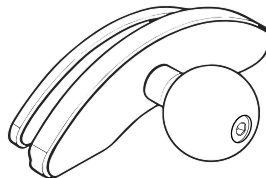

Mounting Base



L-key

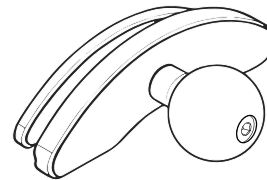

Mounting Base Installation

Toyota Land Cruiser 70 2007-2026

WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screws - keep about one thread engaged.

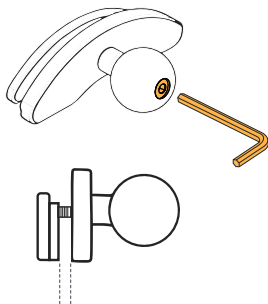


02

Open the vehicle air vent louvers to full air flow position.

Place the mounting base through the larger opening between louvers and bezel.


Note: Mounting base will lock the air vent rotation.

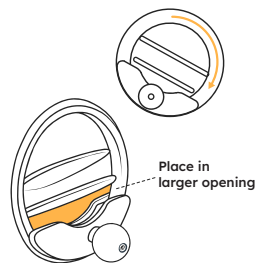

03


Hold mounting base in place against the air vent. Ensure front plate fully wraps around the bezel.

Tighten screw until clamp has a snug fit around bezel.

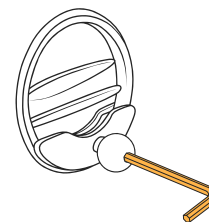

POSITIONING

Fits front four air vents. This mount does not block air flow but locks the air vent rotation.

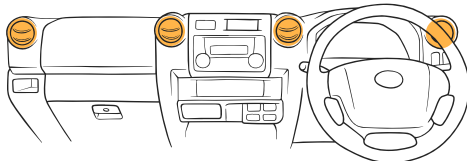

WATCH THIS INSTALL

