WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits. Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not


Watch This Install



COMPONENTS

Using the L-key provided, slightly loosen the two screws on the bottom of the mounting base.

Do not fully remove the screws - keep a few threads engaged.

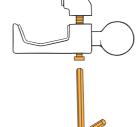




Mounting base is designed to fit into the seam between the nav unit and the bezel.

Gentle push lip into position.

*See "Fitment Note" section of

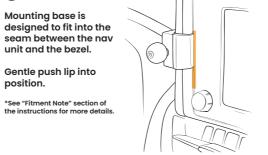




Hold the mounting base in position while tightening screws.

Alternate tightening 5-6 times until both screws are equally snug.



Fitment Note

Mounting base is designed to fit from the mid-section of the screen to the very bottom. For best results, mount towards the bottom.



Mounting base can also be mounted on the driver and passenger side of vehicle.





Mounting Base



L-kev

