


### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

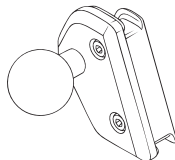

Mounting Base



L-key

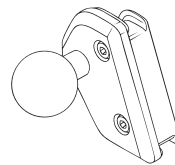


## Mounting Base Installation Instructions

Toyota Sienna 2021-2025

01


Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screws - keep about one thread engaged.

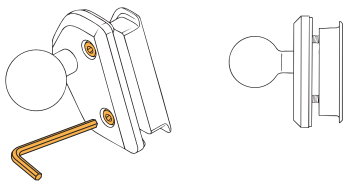


02

Slide the lower tab of the inner mounting base plate into the gap between the air vent louvers and the vent bezel (01).

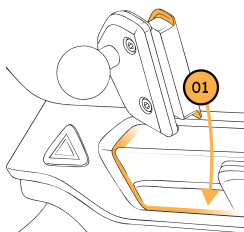


Then slide and rotate the mounting base until the remainder of the tab slides into the bezel corner as shown.

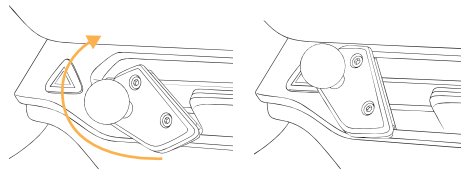

03


Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

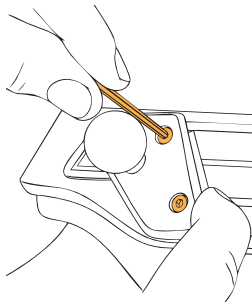

### POSITIONING

Fits in the areas as shown.

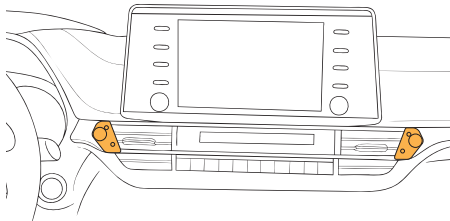

WATCH THIS INSTALL

