


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.


WATCH THIS INSTALL

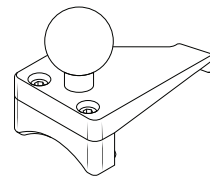

Mounting Base Installation Instructions

Toyota Tacoma 2024-2025


COMPONENTS

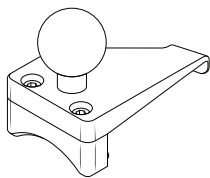

Mounting Base




Trim Tool



L-key

01

Using the L-key provided, slightly loosen the screws, leaving about one thread still engaged.

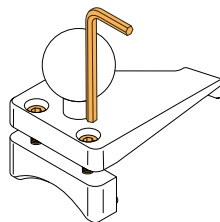


02

Insert the trim tool into the seam above the Engine Start Stop button as shown (01).


Insert the upper mounting base plate lip into that gap (02).

Remove the trim tool.

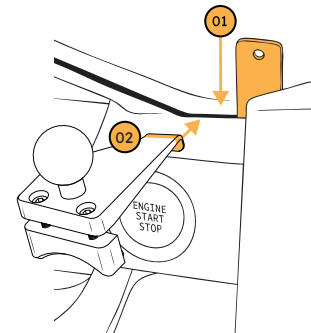

03


Centre the mounting base over the Engine Start Stop button, and insert the lower mounting base plate into its bezel as shown.

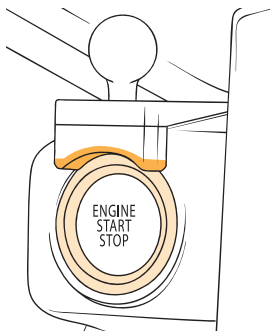

04

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

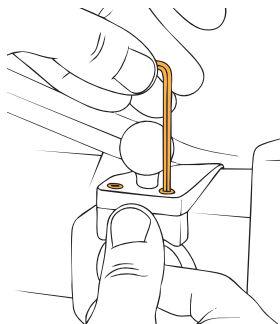

POSITIONING

Fits in the position shown.

