WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications. . Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.

COMPONENTS


Mount electronics away from air flow to prevent heat damage.



Mounting Base



L-key

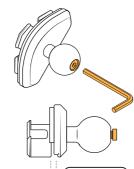

Using the L-key provided,

slightly loosen the screw

Do not fully remove the screw - keep about one


to ensure the rear

thread engaged.

plate moves.


Position mounting base near the upper outer corner of the center air vent on the driver or passenger side.

Slide mounting base upward so the tabs engage the top lip of the air vent.

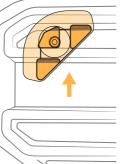



Slide the mounting base fully into the corner of the air vent.

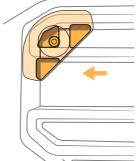



Using the L-key, alternate tightening screw until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.



POSITIONING

Fits upper outer corners of centre console air vents as shown.













> 3mm (1/8") gap





OFFROAM

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not

cover the installation, removal or re-installation of any product.

Watch This Install




SUPPORT

hello@getoffroam.com

415 - 592 - 7626











Installation Instructions

2022-2024 Toyota Tundra

2023-2024 Toyota Sequoia