


## WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

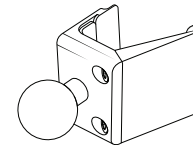


## Mounting Base Installation Instructions

VW Golf MK7 2015-2021

## COMPONENTS

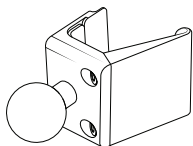

Mounting Base




L-key

01

Using the L-key provided, slightly loosen the screws to ensure the outer plate moves.


Do not fully remove the screws - keep about one thread engaged.

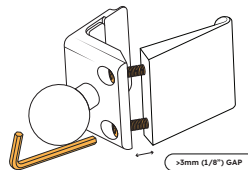

02

Slide the inner mounting base plate (01) into the gap between the dash beam and AC control panel as shown.


Hook the outer base plate (02) behind the dash beam as shown.

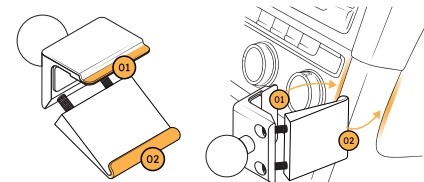

03


Using the L-key, alternate tightening screws until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

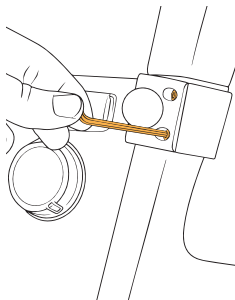

## POSITIONING

Fits on the passenger side dash beam as shown.

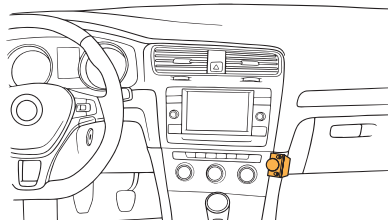

WATCH THIS INSTALL

