
OFFROAM

WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


COMPONENTS

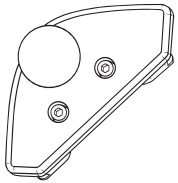

Mounting Base

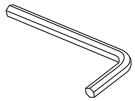

L-key

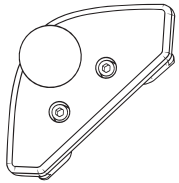


Mounting Base Installation

Volvo XC40 2018+

01

Using the L-key provided, fully loosen the screws and separate the small rear mounting base plate.

The rear mounting base plate will be inserted first, as shown in the next step.

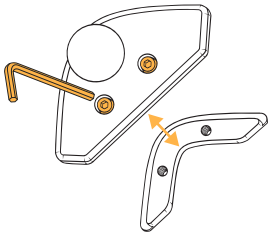


02

Rotate the air vent louver to the inward air flow position (01).

Orient the rear mounting base plate with its small lip positioned towards the front of the vehicle. Insert the upper portion of that lip first, behind the vent bezel as shown (02).

Press the plate firmly upwards and outward into the corner to match the bezel profile (03). You may hear a click as it fits into position.

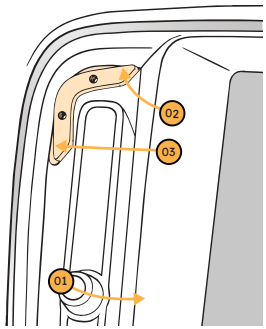


03

Gently place the outer mounting base plate atop the inner plate, centering the screws over the holes in the rear plate.


Using the L-key thread the screws into the rear plate holes.

Alternately hand tighten the screws until the mounting base has a snug fit.

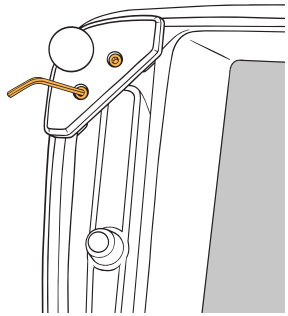

POSITIONING

Fits in the positions shown.

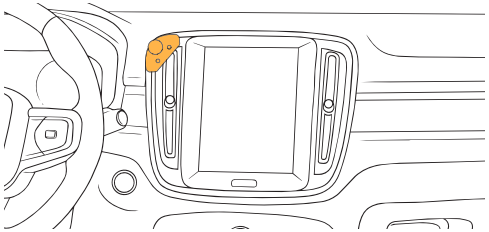

WATCH THIS INSTALL