


OFFROOM

COMPONENTS

WATCH THIS INSTALL

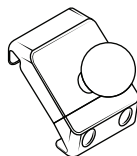


Mounting Base



L-key



Trim Tool

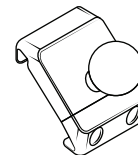

Mounting Base Installation Instructions

Honda Civic 2022-2026
Honda CR-V 2023-2026

WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

01


Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.

Do not fully remove the screws - keep about one thread engaged.

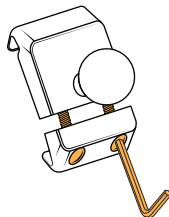

02


Insert the trim tool to the depth shown between the Mesh and Inner Bezel to create a gap.

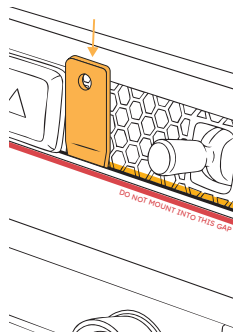

02

Insert the upper mounting base plate tab into that gap between the Mesh and Inner Bezel (01).

Remove trim tool.

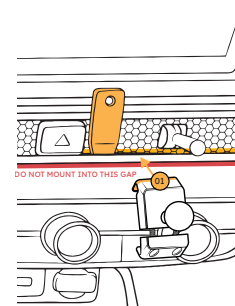


03

Insert the trim tool to the depth shown into the upper portion of the A/C module to create a gap (03).

Insert the lower mounting base plate tab into that gap (04).


Remove trim tool.

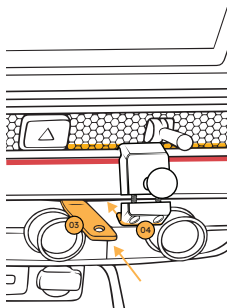

04

Using the L-key, hand tighten the screws until the mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

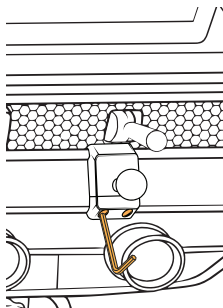

POSITIONING

Fits in the areas as shown. Do not mount below hazard light button.

CIVIC

CR-V

