OFFROAM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extention arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam. shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

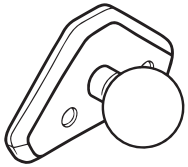

Mounting Base Installation

Ford F-150 2021+ | F-250/F-350/F-450 2023+
Ford F-150 Lightning XL & PRO 2022-2026

COMPONENTS



Mounting Base



L-key

01

Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

Do not fully remove the screws - keep about one thread engaged.

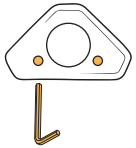

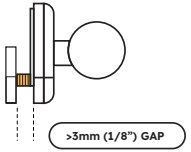

02

Place the mounting base in the upper inner corner of the left or right center air vent.

*See “Positioning” section of the instructions if further clarification is needed.

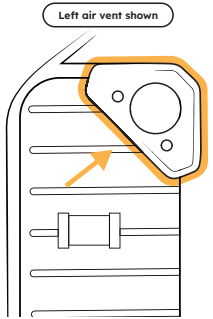

03

Alternate tightening screws until the mounting base has a snug fit around air vent bezel.

To ensure the best fit possible, hold base with hand while tightening.

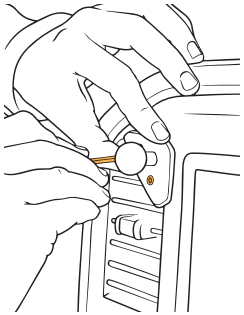

POSITIONING

Designed to fit the inner upper corner of the center air vents, as shown below.

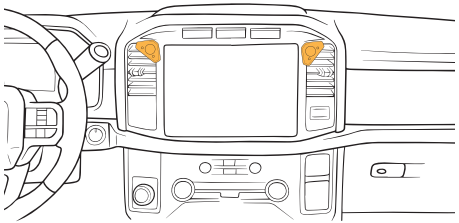

WATCH THIS INSTALL